


SOP

Micro PC recovery

1. Unzip "image" file to the root of an USB flash disk with FAT32 (Don't use SD card over USB adapter).

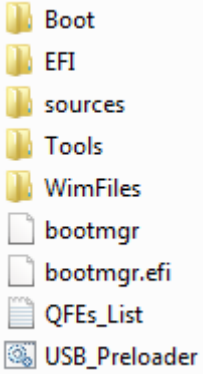

2. Connect USB HUB to the micro PC then connect keyboard and USB flash disk to the USB HUB.

4. Select Bootmanager.


5. Select EFI USB Device




3. After switching ON the micro PC press the ESC immediately. Following screen will appear.




6. Press Y to confirm.

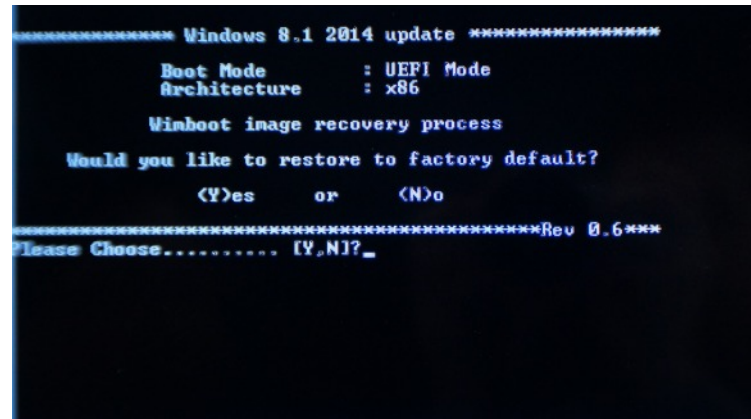

7. The process will take 15 mins.

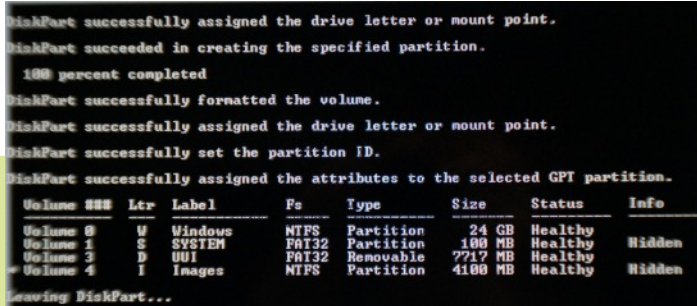

8. Finish.

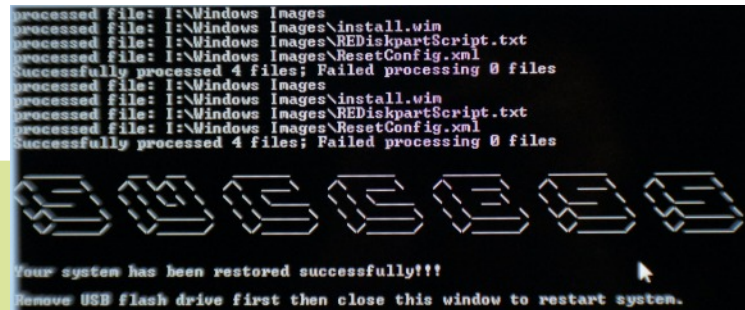

8. Restart Micro PC to apply.