

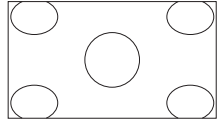 
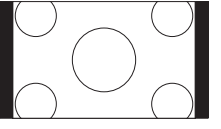 
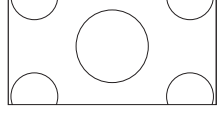 
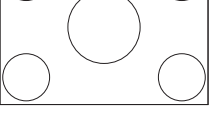 
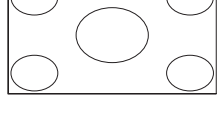 
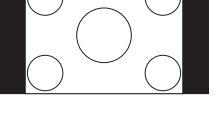 
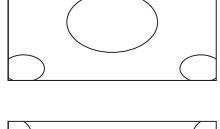 
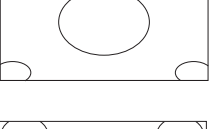 
 
 
# FRONT



## Revision for User's Manual

1. Modify the table of "Adjusting On-Screen Display (OSD) Settings – Media Center Menu"

Device	File Format
USB 2.0 device	USB memory, USB card reader
File System	FAT/FAT 32
Photo file format	JPEG (*.JPG)
Music format	MPEG1 (*.MP3) Bitrate: 32k, 64k, 96k, 128k, 196k, 256k, 320kbps Sampling frequency: 32k, 44.1k, 48kHz
Video file format	MPEG1/2 (*.AVI, *.MPG, *.MPEG, *.TS) MPEG4 (*.AVI, *.MP4) H.264 (*.AVI, *.MP4, *.TS)

2. Modify the table of "On-Screen Menus Selection > Picture > Screen mode"

Picture	
Option	Description
Screen mode	Select the aspect ratio of the display (Cinerama/14:9 Zoom/16:9 Zoom/16:9 Zoom up/16:9 format /4:3 format/Wide Zoom/Zoom 2/Wide Zoom 2/Stretch Zoom).
	Cinerama  14:9 Zoom 
	16:9 Zoom  16:9 Zoom up 
	16:9 format  4:3 format 
	Wide Zoom  Zoom 2 
Wide Zoom 2  Stretch Zoom 	

3. For SL series, the illustration of SPDIF connector should be modified from  to .

4. On-Screen Menus Selection > TV > Country, New Zealand and Australia are added.

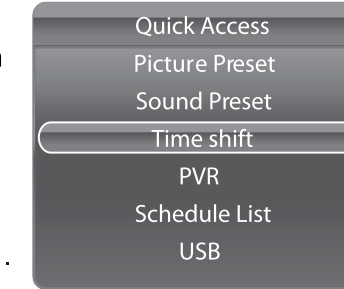 
P/N: 70-HANNUM-ADD1A

# BACK

## Instruction for Time shift function

Allows you to record the TV programme so that you won't miss the favourite part even if you go out. Before you use the function, connect a USB device to the TV first. For the first time, you should do the disk setup for the USB device.

- Press **Menu** on the remote control and select **TV > Time shift**.
- Press **Left/Right** to select **On** to switch on the time shift function, then press **Exit** to close the menu.
- Press **Option** on the remote control and select **Time shift**, then press **OK** to confirm.
- Follow the directions on the screen to do the setup.
- After the disk setup is done, press **Option** and select **Time shift**.
- Press **OK** to display the time shift menu.



- Press the red button to pause the picture and begin the time shift.
- Press the red button to play the recorded part.
- When the time shift menu disappears and only the timing of the time shift remains on the screen, you can press the red button or **OK** to call out the time shift menu.
- Press the green button to fast backward or the yellow button to fast forward.
- Press the blue button to quit the time shift function.

### Notes:

- Before you plug the USB device to TV, make sure you have backed up the data in the device to avoid the unusual performance make your important data lost.
- We recommend you use a USB device with the free file size bigger than 1Gb and disk speed faster than 5.0M/sec.
- The bigger file size for time shift, the longer you can record the programme.
- If changing channel in time shifting, a message prompts to let you select **Yes** or **No**. You can select **Yes** to exit the time shift function and execute the channel change.

成品大小: 182(W)mmX257(H)mm±2

正反面印刷

印刷顏色: Black

紙質: 雙膠紙 70 磅

SCALE 1:1	DRAWN BY	DATE	DRAWING NAME
UNIT mm	CHECKED BY	DATE	S_SK-SL_UM Insert_EU_V01_B
SHEET 1/1	APPROVED BY	DATE	PART NAME
HannStar Display Corp.			PART.NO. REV. 1.0

VERSION

DESCRIPTION